


NEW! Easy Steps to SAVINGS

Reloading Instructions DuraCoat Color Resin Ribbons for Gerber FX® Printers

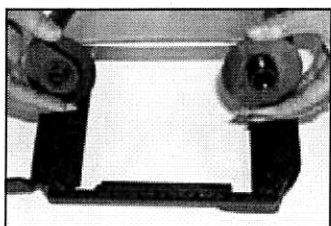


STEP 1 Open OEM cassette and remove spent ribbon



STEP 2 Remove blue plastic bar from OEM Ribbon


Blue plastic bar

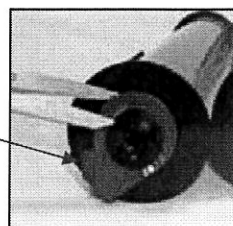


STEP 3 Remove hubs and gears

Remove Gears


Remove Hubs

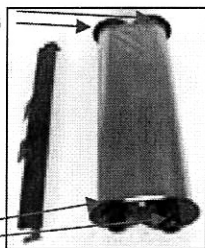



STEP 4 Remove outer wrap from New DuraCoat refill and tear at perforation

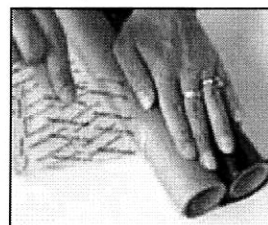

STEP 5 Reinsert OEM hubs and gears into DuraCoat ribbon.
Be sure that supply side has ridges and take-up side is smooth.

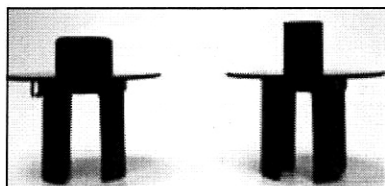


Smooth = Take-up side

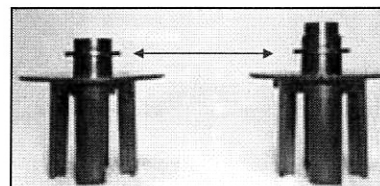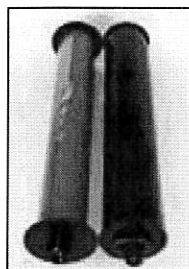

Ridge = Supply side

STEP 6 Place New DuraCoat Refill into cassette. Supply side left, take-up side right.
Load cassette into printer and begin printing.

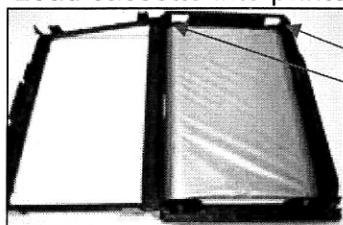

Gears should be on top

